



1. Turn off gauge power.
2. Plug shift light into **right side** of gauge.
3. Turn gauge power back on.
4. Follow gauge instructions for setting the set -points and brightness

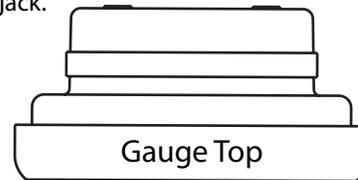

OPTIONAL SETUP: If you wish to use the Shift-Light/Warning-Light in a different application then you do have the option to connect it directly to a 12volt source to power on the LEDs.

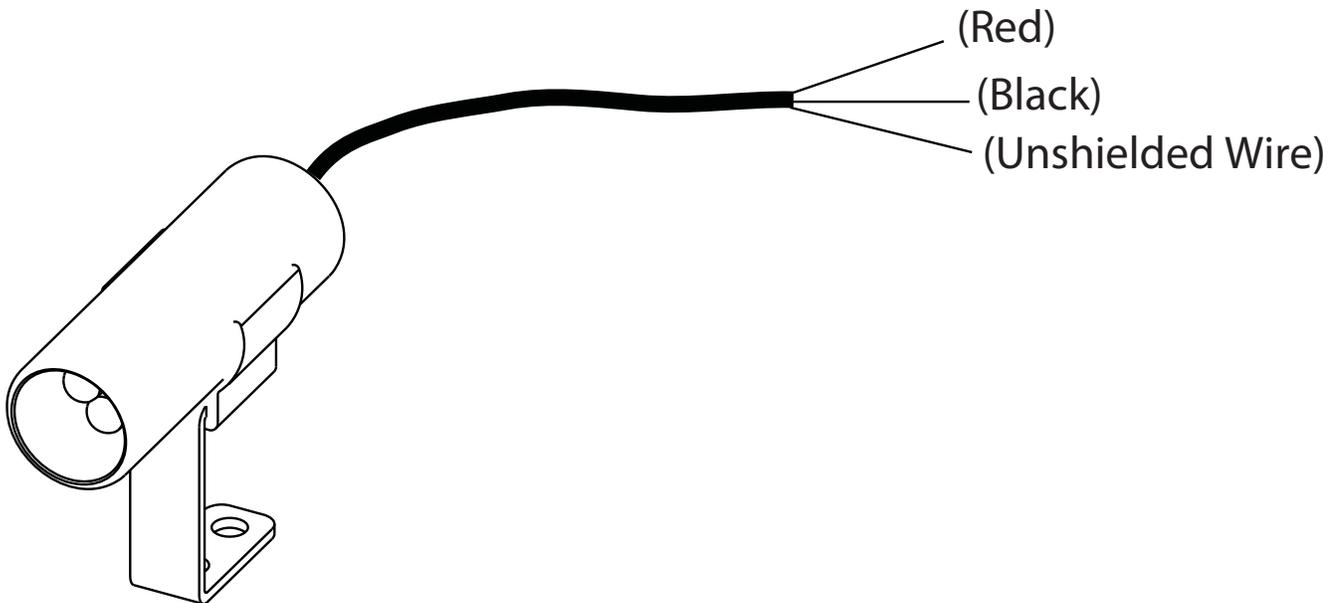

1. Cut off the stereo end that would normally plug into a Speedhut gauge.
2. Strip back the insulation to expose the red wire, black wire, and unshielded wire.
3. Join the black and red wires together.
4. Connect the red/black wires to a 12volt source to power on the LEDs.
5. Connect the unshielded wire to a good ground.